

Juki Sit Down LCD, Lighting, and Surestitch Installation


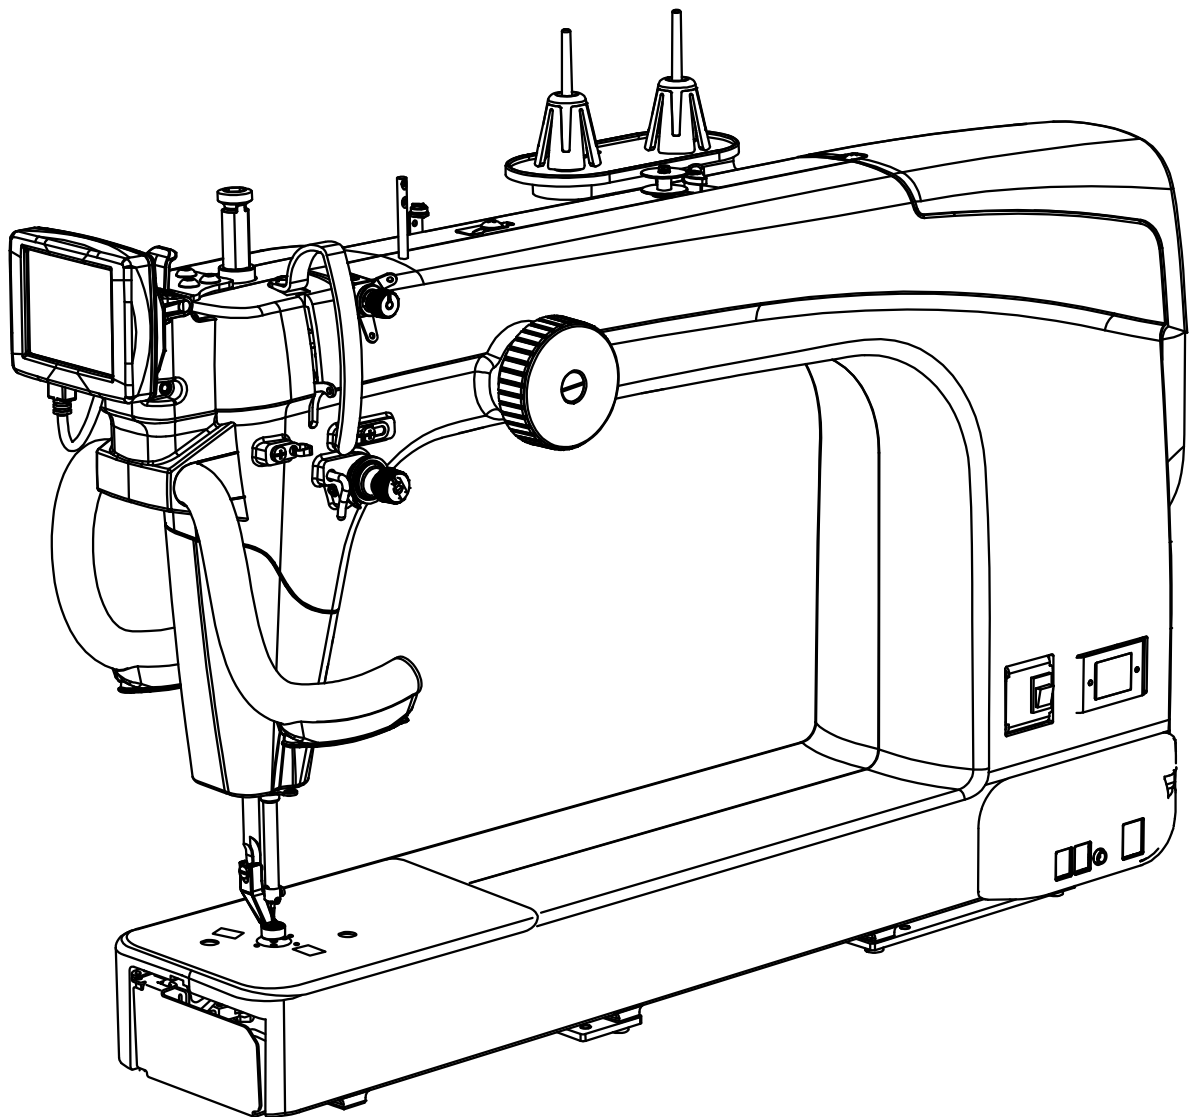



Table of Contents

4	Parts List
6	Front LCD Orientation Instructions
10	Side LCD Orientation Instructions
12	Juki HDMI Cable Static Protection
13	Needle Plate Optical Sure Stitch Cable


Parts List

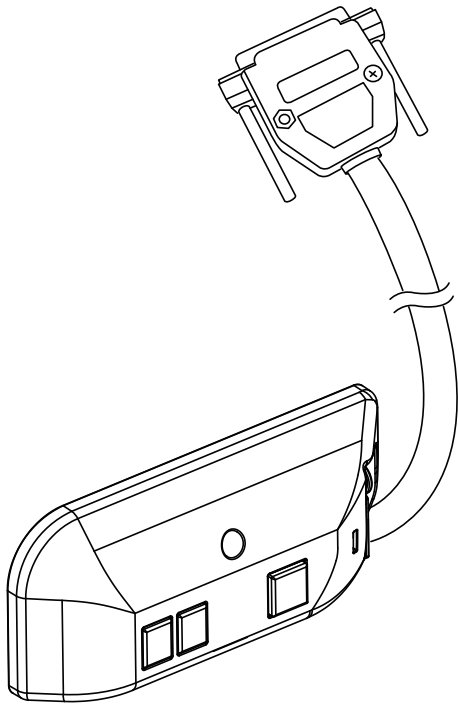


Sure Stitch Box

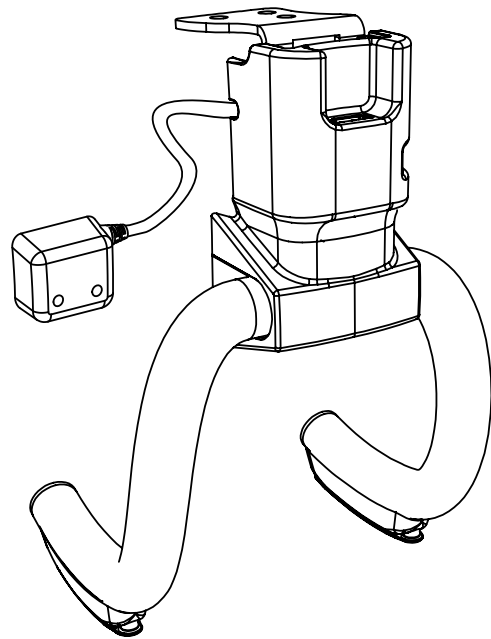


Lighting Mount

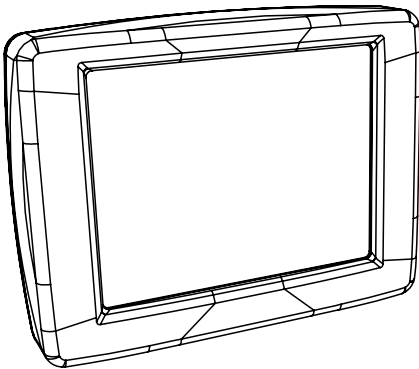

LCD Screen

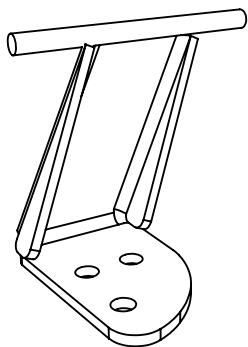


Side LCD
Mount Bracket

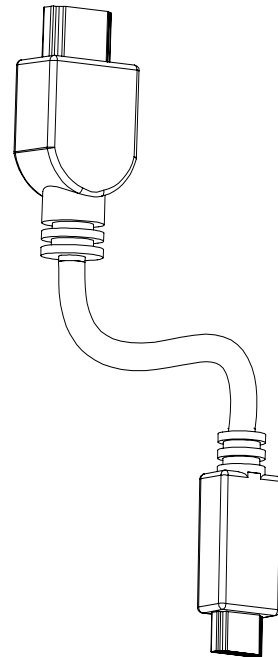

HDMI Cable



 
4mm Allen Wrench



2.5mm Allen Wrench



2mm Allen Wrench

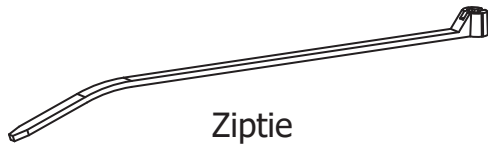


Ziptie




Ziptie Mount



Insulating Sheet

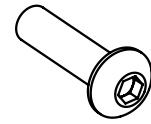

M4 x 16mm
SBHC Screw
(1)

 

M3 x 16mm
SBHC Screw
(1)



M6 x 12mm
SBHC screws
(3)

Front LCD Orientation Instructions

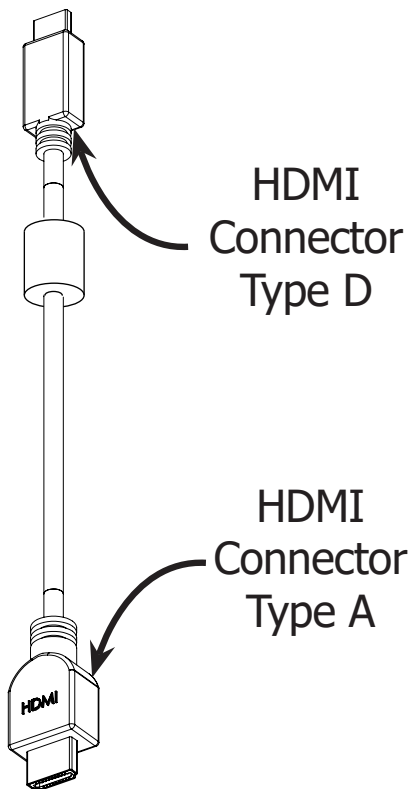
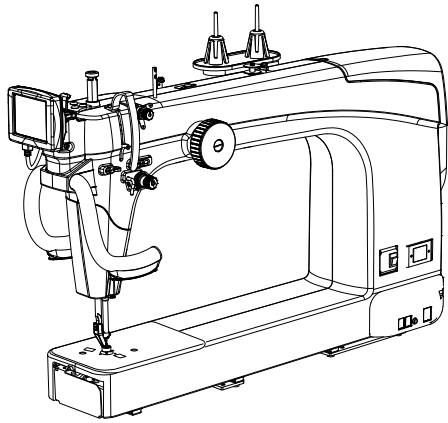


Fig. 1



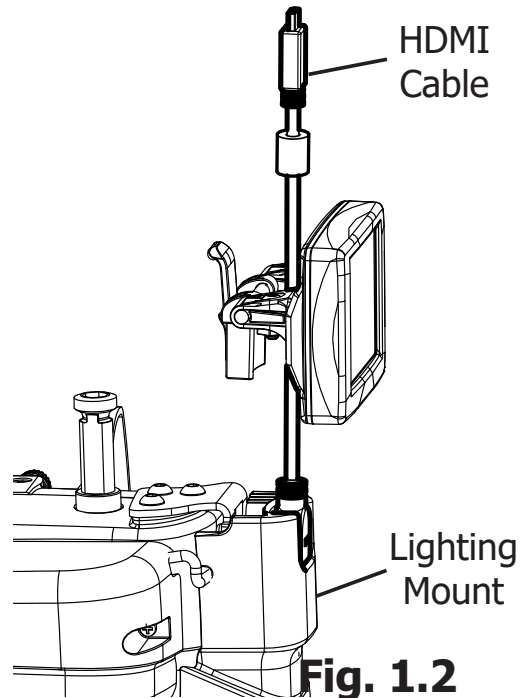


Fig. 1.2

1 Take the HDMI cable end (HDMI connector Type A see Fig. 1) and plug it into the Lighting Mount as Shown in Fig. 1.2. Pass the cable behind the LCD from the bottom.

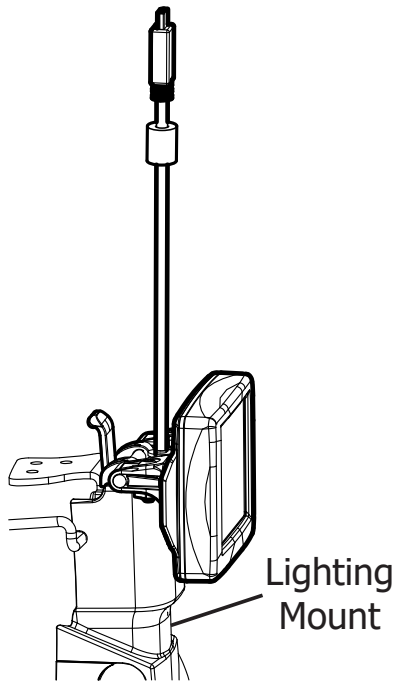

2 Clip the LCD into the Lighting Mount

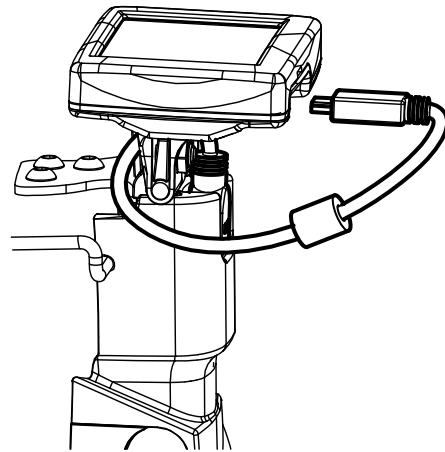



3 Tilt the LCD Screen back and plug the other HDMI cable end (HDMI connector Type D, see Fig. 1) into the LCD.

continued from page 7...

Front LCD Orientation Instructions

Fig. 2

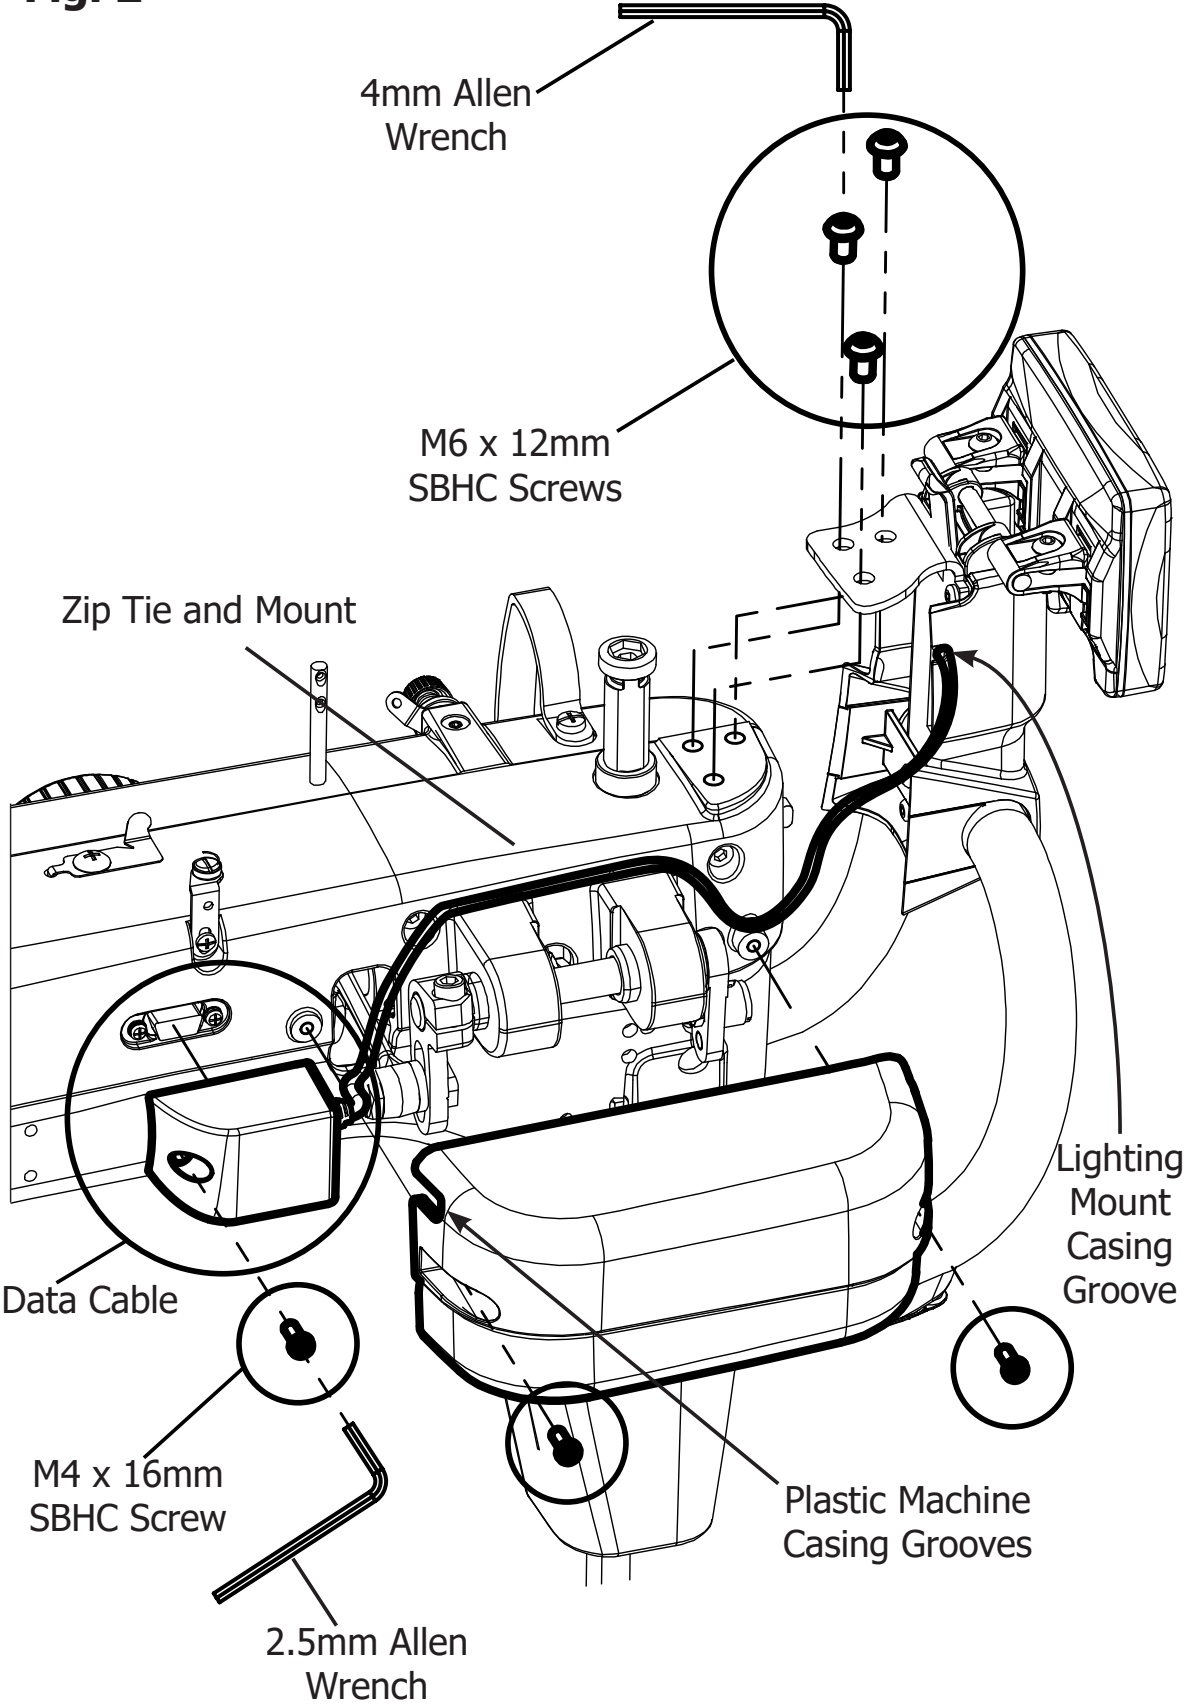

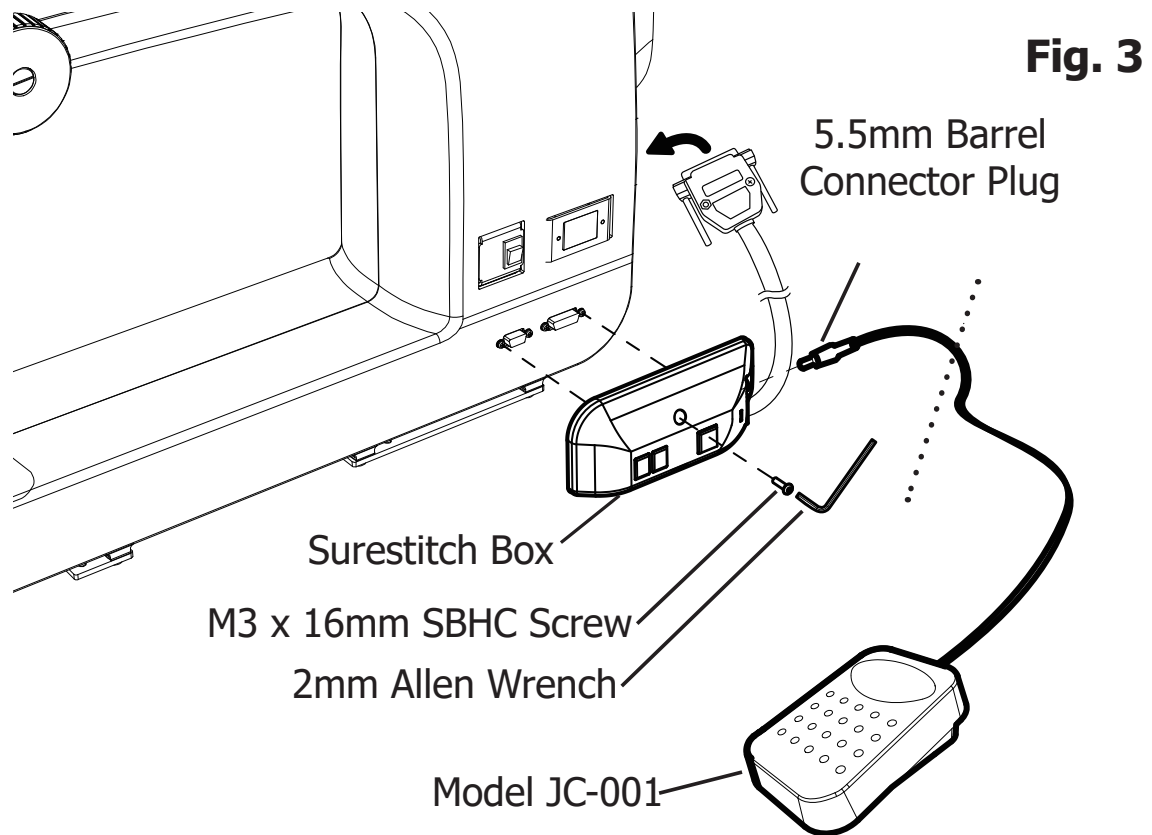


4 Install the LCD and Lighting Mount using the 4mm Allen Wrench and (3) M6 x 12mm SBHC Screws. Be sure not to pinch the LCD Data Cable and that it falls in the groove on the LCD Mount Bracket Casing.

5 Remove the (2) screws holding the Plastic Machine Casing to the side of the machine using a phillips head screw driver.


6 Plug in the Data Cable into the left side of the machine and secure it in place using the 2.5mm Allen Wrench and M4 x 16mm SBHC Screw. Secure the Cord to the machine using the Zip Tie and Zip Tie Mount as shown in Fig. 2.

7 Reinstall the Plastic Machine Casing to the side of the machine. Be sure to cover the Data Cable without pinching it by placing it in the grooves on the Plastic Machine Casing.


8 Plug in the Surestitch Box to the back right corner of the machine. Remove the 5.5mm Barrel Connector Plug and plug in the foot pedal into the back connector of the Surestitch Box. Secure the Surestitch Box in place using the 2mm Allen Wrench and the M3 x 16mm SBHC Screw.

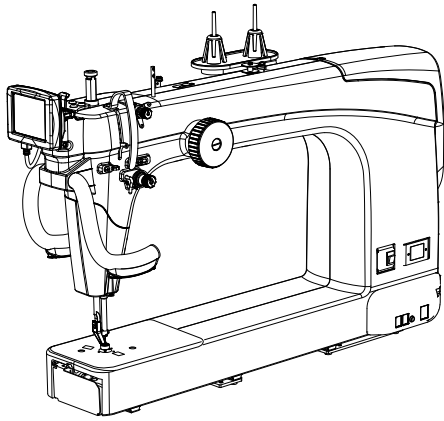


Side LCD Orientation Instructions

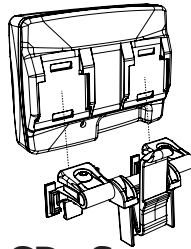


1 Pull LCD Screen off LCD Clips.

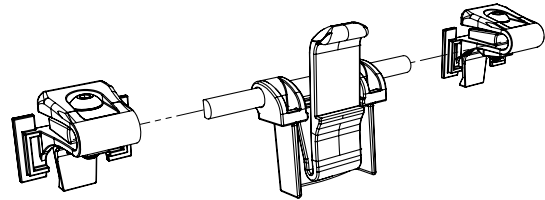

2 Pull LCD Clips off LCD Mount.

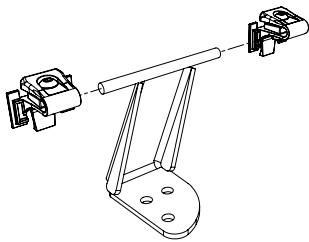

3 Push LCD Clips onto rod ends of Side LCD Mount Bracket.

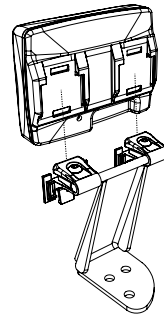

4 Push LCD Screen onto LCD Clips. Continue to page 11...

Side LCD Orientation Instructions

5 Install the LCD Mount Bracket and Lighting Mount using the (3) M6 x 12mm SBHC screws and 4mm Allen Wrench. Be sure not to pinch the LCD Cable and that it falls in the groove on the LCD Mount Bracket Casing.

6 Plug the HDMI Cable into the bottom of the LCD Screen and into the Lighting Mount as shown in Fig. 4.

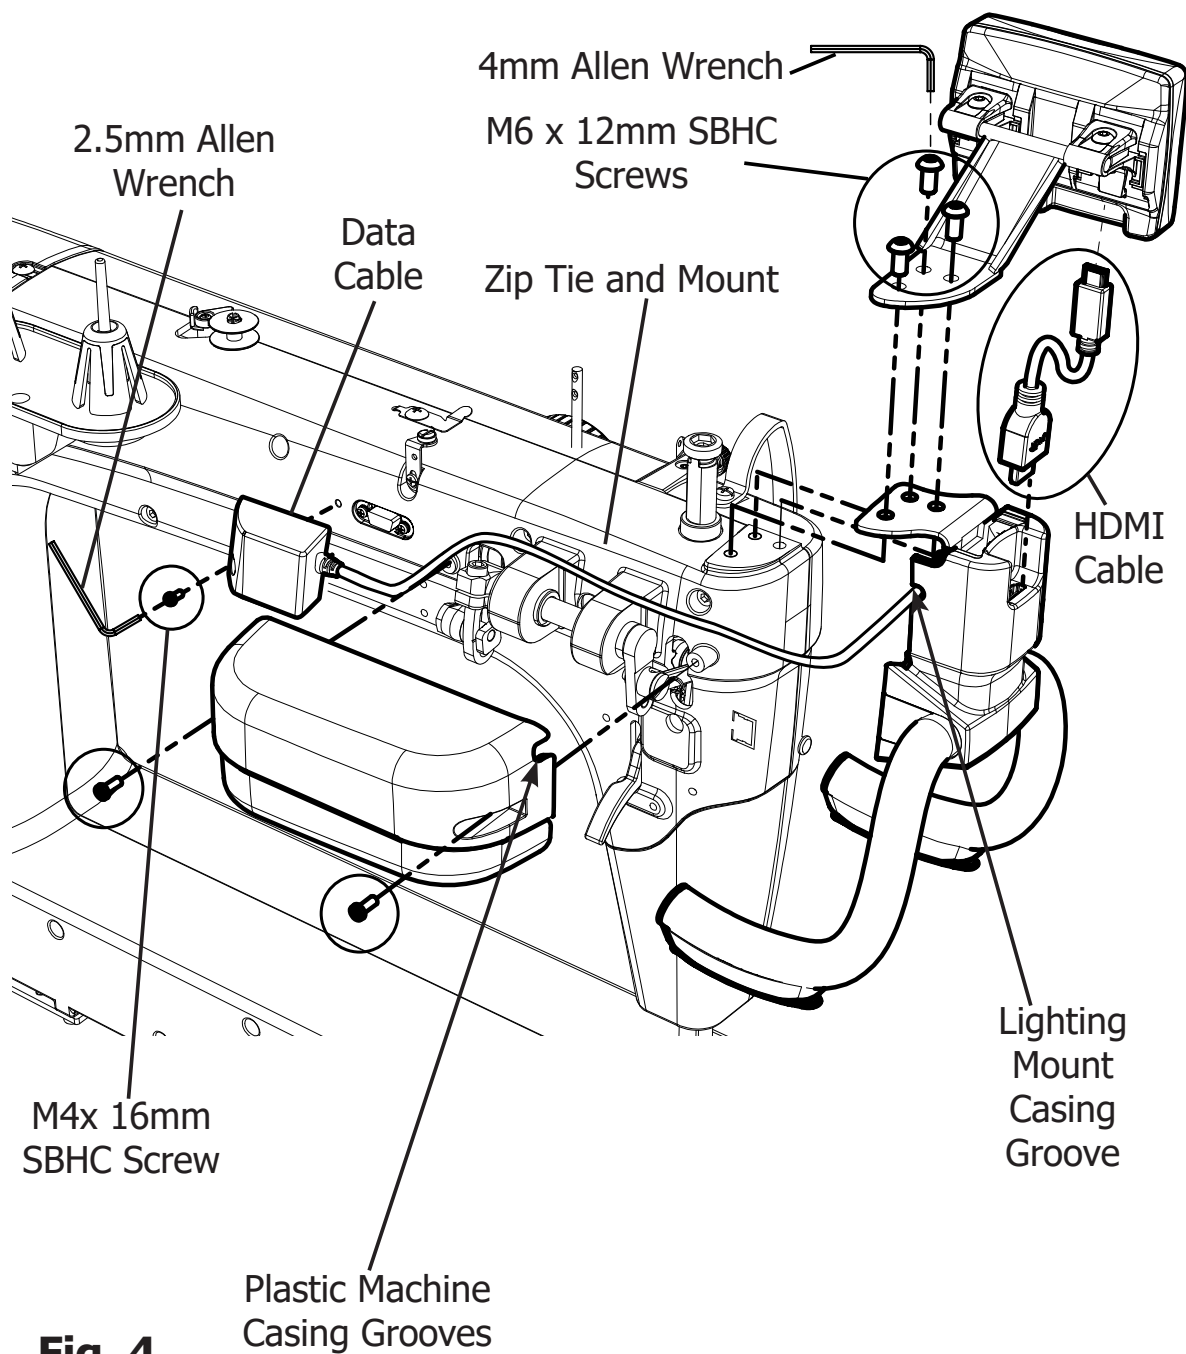


Fig. 4


7 Remove the (2) screws holding the Plastic Machine Casing to the side of the machine using a Phillips head screw driver.

8 Plug in the Data Cable into the left side of the machine and secure it in place using the 2.5mm Allen Wrench and M4 x 16mm SBHC Screw. Secure the cord to the machine using the Zip Tie and Zip Tie Mount as shown in Fig. 2.

9 Reinstall the Plastic Machine Casing to the side of the machine. Be sure to cover the Data Cable without pinching it by placing it in the grooves on the Plastic Machine Casing.

Juki HDMI Cable Static Protection

1 Place the insulating sheet over the gap between the HDMI cable and the LCD to protect against static interference (see Fig. FS-1).

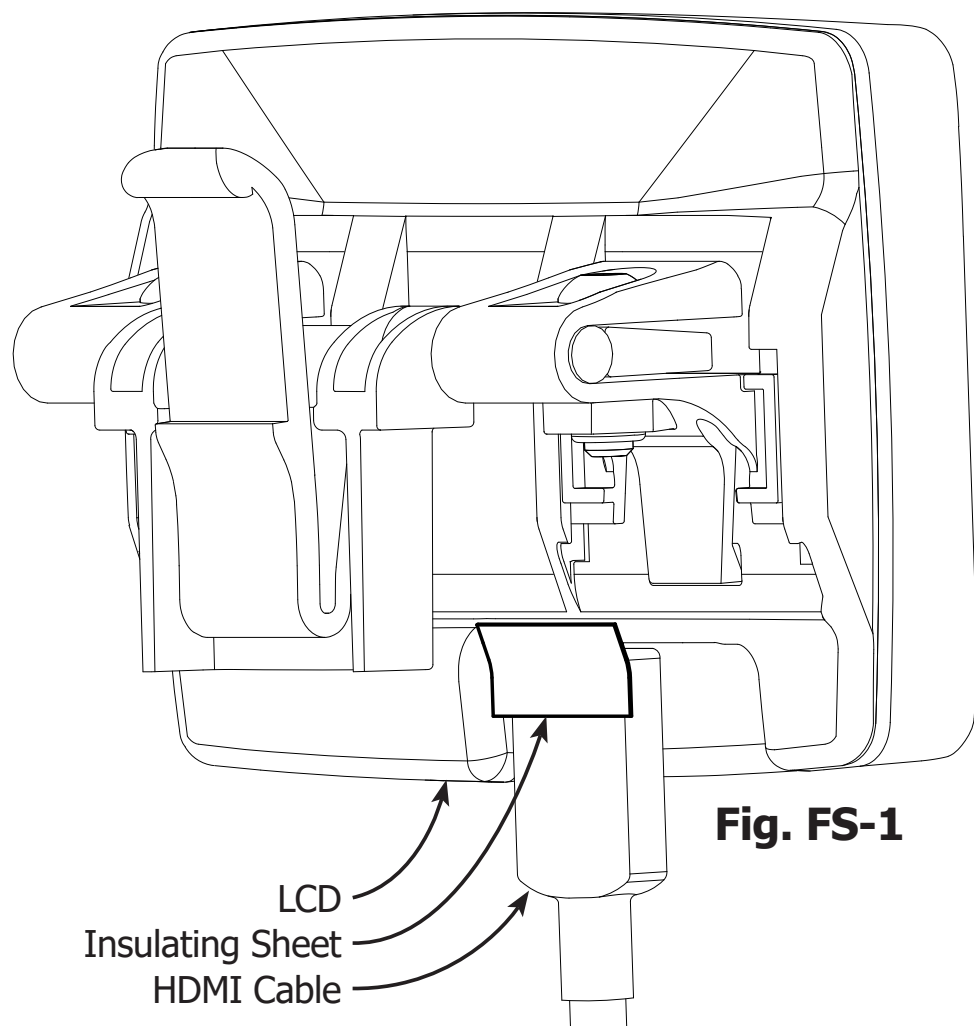

Needle Plate Optical Sure Stitch Cable

1 Plug the cable from the Sure Stitch box into the back of the machine so that it is firmly seated (see Fig FS-2).

Fig. FS-2

